

Looney Tunes Coil Chart

Red Chain			Green Chain			Blue Chair		
Wire	Coil	MOSFET #	Wire	Coil	MOSFET #	Wire	Coil	MOSFET #
0 Purple	Sling Left	Q8	8 Purple	Lower Right Flipper Main	Q9	16 Purple	Upper Left Flipper Main	Q10
1 White	Lower Left Flipper Main	Q29	9 White	Auto Launch	Q30	17 White	Magnet	Q31
2 Black	Lower Left Flipper Hold	Q11	10 Black	Lower Right Flipper Hold	Q12	18 Black	Upper Right Flipper hold	Q13
3 Yellow	Drop Target Knockdown	Q26	11 Yellow	Knocker	Q27	19 Yellow	VUK	Q28
4 Brown	Divertor (Ball Lock)	Q14	12 Brown	Trough Eject	Q15	20 Brown	Upper Right Flipper Main	Q16
5 Orange	Front Scoop	Q23	13 Orange	Right Sling	Q24	21 Orange	Back Scoop (Door)	Q25
6 Pink	Drop Target Reset	Q17	14 Pink	Shaker	Q18	22 Pink	Right Divertor	Q19
7 Grey	Center Scoop (Left Orbit)	Q20	15 Grey	Right Up Post	Q21	23 Grey	Upper Left Flipper Hold	Q22

Note: Ensure safety precautions are taken, and the machine is disconnected from power during this process. Seek professional assistance if you are not comfortable or experienced in working with electronic components.

NOTICE

Need to report a code bug in Looney Tunes? You can send an email directly to DJ@spookypinball.com with the subject "Code Bug"